

Brentwood

Long term comfort for a task environment



Brentwood

mid-back ergonomic chair



*Offers long-term comfort
for a task environment.*



California Prison Industry Authority

560 East Natoma Street Folsom, CA 95630-2200

916.323.2419 • calpia.ca.gov



- CUSTOMER SUPPORT
- REPORT A PROBLEM
- CUSTOMER FEEDBACK
- EXEMPTION REQUEST

calpia.ca.gov



Shown with Headrest
Style #680701

Brentwood ergonomic chair
Style #680700

seat size:	20" W x 19" D
seat height:	16.5" - 20.5"
seat depth:	adjusts 2" range
back size:	22" H x 19" W
arm height (ie 8"-11"):	6.5" - 9.5"
arm width adjustment:	2" range
weight capacity:	275 lbs.



Optional Soft Casters for Hard Floor Surfaces

Minimizes slippage on hard flooring. Soft casters can be installed before delivery if chairs and casters are ordered at the same time.

Brentwood

mid-back ergonomic chair

The Brentwood was designed with a mesh back that allows air flow for cool comfort and all day ergonomic support.

 


Shown without Headrest
Style #680700

Features:


- Self-adjusting tilt resistance, synchronized tilt mechanism
- Seat height adjustment
- Tilt lock in four positions
- Seat depth adjustment
- Arm height and width adjustment
- High resilient heavy duty seat molded foam
- Injection molded heavy duty structural back frame with high quality mesh
- Optional adjustable headrest
- Adjustable lumbar
- Class IV rated gas cylinder
- High profile design base, 26"
- Twin wheel heavy duty 55mm casters

Brentwood CHAIR ADJUSTMENTS

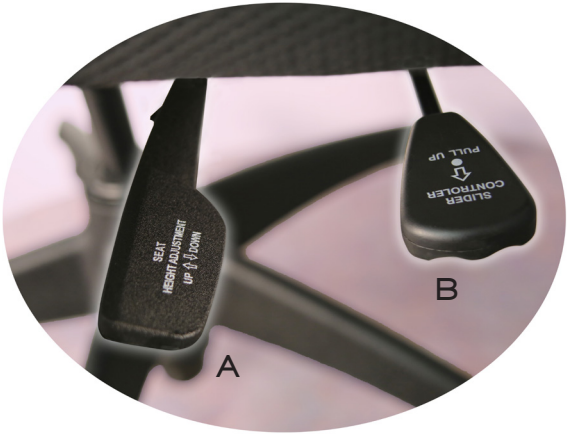

- Seat Adjustment Levers:**
Right-Hand Side of Chair
- A. Pull up for lift height adjustment.
- B. Pull up to disengage seat slider. Push forward to increase seat depth; backwards to decrease.

 - Seat Adjustment Lever:**
Left-Hand Side of Chair
- C. Push or pull forward to lock the seat and back in four positions with anti-kick safety feature. Push or pull rearward for free float control.

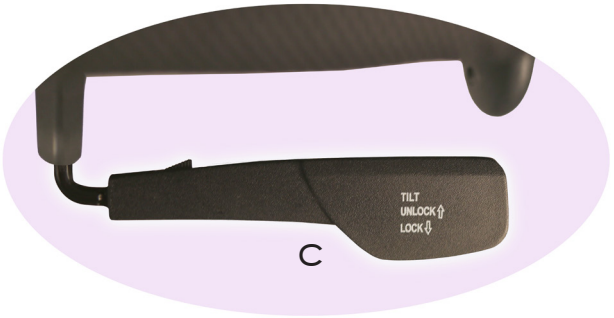

Optional adjustable headrest

The Brentwood is equipped with the "Self-Weighing" chair control that responds to torque requirements covering a wide range of users without the need for tension adjustment.



See website for
Recycled Content Certificate

To adjust the lumbar height, slowly pull the lumbar pad up in 1/2" increments (or clicks) with both hands while seated.

To adjust arm width, push lever backward to release chair arm adjustment. Arms adjust outward up to 2". Pull arm inward towards chair to narrow width. Push lever forward to lock into place.

To adjust the height of the arms, push and hold the button while moving the arm up or down. Release the button at the desired height.

For more information visit our online catalog at: calpia.ca.gov or contact CALPIA Sales at: 916.323.2419