

ATLAS

cutting edge seating series



ATLAS

cutting edge seating series



California Prison Industry Authority
 560 East Natoma Street Folsom, CA 95630-2200
 916.323.2419 • calpia.ca.gov



ergonomics, comfort, and functionality

ATLAS

cutting edge seating series

Atlas is a cutting edge seating series. The flowing sleek lines of this chair add to the ambiance of sophistication in any environment while also providing incredible ergonomics, comfort and functionality.



MID-BACK
Style #681200



MID-BACK MESH
Style #681201*



HIGH-BACK
Style #681300

Features


- The upholstered back is a beautiful, sleek back with integrated adjustable lumbar support
- The mesh back is a 4 way elastomeric stretch mesh in solid black, with an easy to adjust lumbar knob
- The seat is a blend of high density, injection molded foam. Foam is body balanced and ergonomically sculpted to support optimal sitting position
- Control mechanism features quick adjust advanced synchro that uses single rotation adjustments for the back (no endless turning of a handle to adjust your backrest to your level of comfort)
- Chair arms are height and width adjustable
- Sturdy five-star base with casters for mobility

Options

- The upholstered back and seat are available in both the mid-back and high-back styles
- The mesh back with upholstered seat is available in the mid-back style
- Available in a variety of upholstery options
- See options and ordering information: calpia.ca.gov

ATLAS *cutting edge seating series*

seat height adjustment range:	16.6" - 21.4"	
seat depth adjustment range:	15.1" - 17.1"	
back size:	Mid-Back: 19" W x 21.7" H	High Back: 19" W x 27" H
arm height (above seat):	5.2" - 7.6"	
arm width adjustment:	2" range each side	
weight capacity:	400 lbs.	

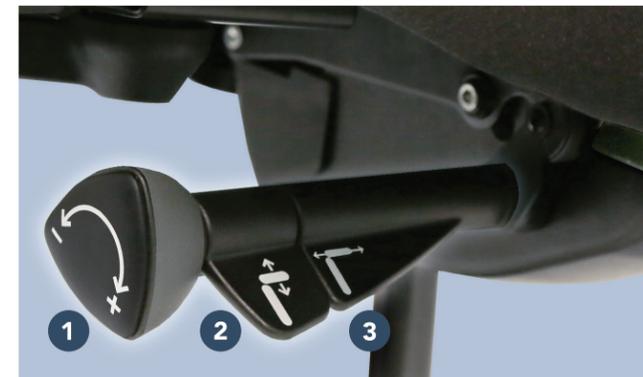

RIGHT SIDE SEAT ADJUSTMENTS

- 1. Back tension adjustment** - Rotate knob right to increase tilt tension. Rotate knob left to decrease tilt tension.
- 2. Seat height adjustment** - Adjust the seat height by lifting your weight out of the chair and pulling up on the paddle. Proper seat height is realized when the top of your legs are somewhat parallel to the floor.
- 3. Seat depth adjustment** - Push down on paddle while shifting your weight forward to move your seat forward. Shift backward to move your seat back.



ARM HEIGHT/WIDTH ADJUSTMENTS

- 6. Arm height adjustment** - While pressing down the button located below the armrest, use your hand to raise and lower the arm height.
- 7. Arm width adjustment** - Rotate the switch located beneath the arm forward. Grasp the arm and adjust it out to your desired width away from seat. Each arm adjusts separately. When finished making adjustments, rotate the switch back to its original position.



LEFT SIDE SEAT ADJUSTMENTS

- 4. Forward tilt adjustment** - Push the paddle into the down position and lean back in the chair. You will hear a click when the forward tilt mechanism has turned on. Sit in your normal position to use the forward tilt feature. To turn off the forward tilt feature, lift the paddle in the up position and lean back in the chair. You will hear a click when the forward tilt mechanism has turned off.
- 5. Tilt limiter** - Single rotation tilt limiter that locks in five (5) positions. Tilt the seat back to desired angle and twist slightly. To unlock, twist the other way, leaning back. The tilt lock angles can be reached within a single turn of the handle.



BACK SIDE LUMBAR POSITION ADJUSTMENT

- 8. To adjust lumbar comfort** (for Upholstered Back #681200, #681300) From the seated position, use your right hand to make adjustments by engaging the small, black lumbar adjustment bar. Slide the small bar to the left to move the adjustable lumbar support up. Slide the small bar to the right to move the adjustable lumbar support down. The travel range is 2.5"
- *To adjust lumbar comfort** (for Mesh Back #681201) Simply pull knob up or down to desired position.